



# Pipettenabstreifer Material: PE

## Pipette wiper Material: PE



Für Flaschenmündung PP 28 und  
Pipetten mit Nenndurchmesser  
9.5, 11 und 13.6 mm.  
Zwei Ausführungen lieferbar:  
a) kurze Ausführung  
b) lange Ausführung

*For bottle-neck PP 28 and  
pipettes with a nominal  
diameter of 9.5, 11 and 13.6 mm.  
Two versions available:  
a) short version  
b) long version*

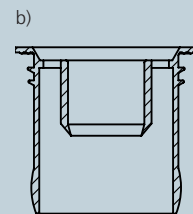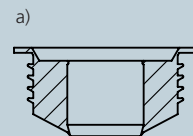

### Hanhdabung und Funktion des Abstreifers

Der Abstreifer wird entweder im Produktionsprozess in den Flaschenhals eingedrückt, bevor der CR-Verschluss aufgeschraubt wird, oder der Pipette beigelegt und dann vom Verbraucher nach dem Öffnen des CR-Verschlusses in den Flaschenhals eingedrückt.

Der Abstreifer hat die Funktion, das der Pipette anhaftende Medikament beim Herausziehen abzustreifen, damit ein exaktes Dosierergebnis erreicht wird.

Nach Gebrauch oder Dosierung wird die Flasche mit eingesetztem Abstreifer mit der CR-Schraubkappe wie üblich verschlossen.

### Handling procedure and function of the wiper

*The wiper is either pressed into the bottleneck during the production process before the CR screw cap is screwed on or it is added to the pipette and is then pressed by the consumer into the bottleneck after opening the CR screw cap.*

*The function of the wiper is to wipe off the medication clinging to the pipette after being pulled out so that a precise dosing result is achieved.*

*After use the bottle with the inserted wiper is sealed as usual with the CR screw cap.*

